

Monthly

Clean the front, back and other exposed parts of the 300-Series digital lock with a light spray of silicone based lubricant, like **WD-40 Specialist Silicone Lubricant** or **CRC 808 Multi-Purpose Silicone Spray**. Remove any remaining spray with a soft cloth.

Do not use oil based lubricants. Oil based products will attract dirt. A silicone based lubricant will also help to displace water away from the internal mechanisms.

Annually

- a) Remove the 300-series digital lock from the door or gate.
- b) Spray the inside of the lock with a silicone based lubricant through the tumbler holes on the reverse of the keypad. Remove any remaining spray with a soft cloth.
- c) Spray all of the fixings, accessories and latch with a silicone based lubricant, remove any remaining spray with a soft cloth.
- d) Push each of the buttons and rotate the knob several times to ensure the lock is working smoothly and that all buttons return to their outward position.

Notes

Whenever your digital lock is not operating correctly (eg sticky or code not working), the above maintenance can be carried out.