 



THIS INSTRUCTION COVERS ALUMINIUM DOOR PREPARATION
AND SECURING THE LOCK INTO THE ALUMINIUM SECTION.
FOR HOLE LOCATIONS, CYLINDER AND ADAPTOR INSTALLATION INSTRUCTIONS
AND FUNCTION SETTING INSTRUCTIONS - REFER TO INSTRUCTIONS SUPPLIED WITH THE LOCK.



DOOR PREPARATION



- Establish height that lock will be on door.
- Cut face plate window to the dimensions shown. Drill and countersink fixing holes as shown.
- Use instructions and template supplied with lock for cylinder, furniture holes etc.

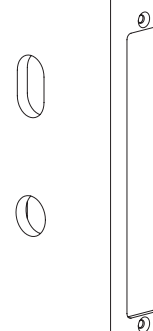


ASSEMBLE FIXING PLATES

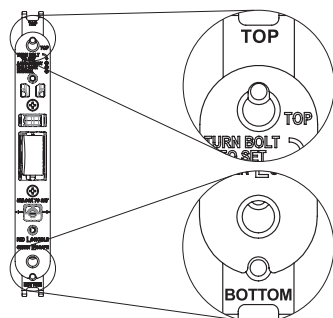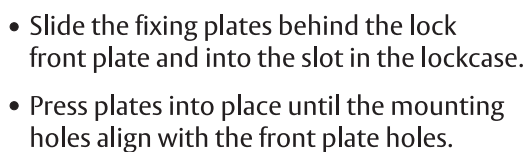


LOCK INSTALLATION

- Tilt lock through face plate window, lift into aluminium section and align screw holes.
- Secure the lock using the supplied 8mm long screws.
- To hand the latch bolt, pull latch bolt forward and rotate to required handing.

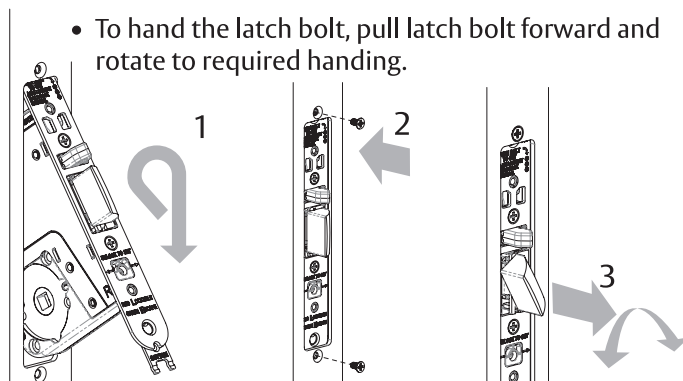


FACE PLATE INSTALLATION

- Set lock and install cylinders as per standard **MOUNTING INSTRUCTIONS**.
- Fix the face plate onto lock using the supplied 8mm long screws.

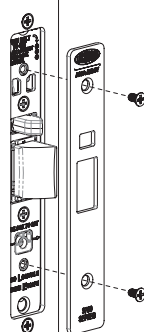

STRIKE INSTALLATION

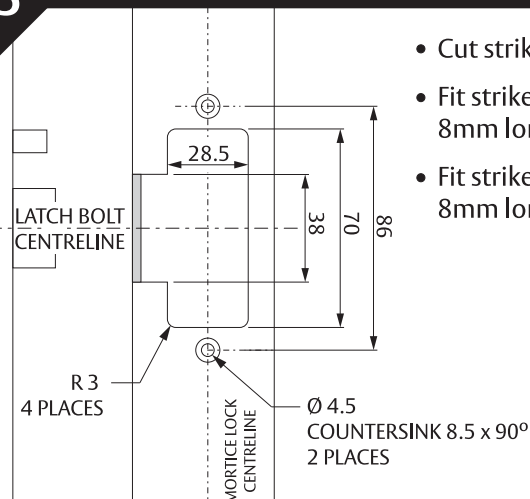

- Cut strike cutout to the dimensions shown.
- Fit strike box using supplied 8mm long screws.
- Fit strike onto strike box using supplied 8mm long screws.

