CARE AND MAINTENANCE

Door Furniture

At twelve (12) monthly intervals, the fixing screws securing the furniture to the door, both surface fix and through fix, should be checked and tightened as required. Loose fitting furniture which fails will not be covered under warranty.

All door furniture should only be wiped clean with a soft damp cloth. A non-abrasive mild household detergent may be used to remove ingrained grime.

Mortice Lock

Care should be taken to ensure the internal components are kept free of dirt and woodchips during installation as this is the most common cause of malfunction and will not be covered under warranty. Tubular latches used in external situations should be lubricated by an aerosol lubricant at twelve (12) monthly intervals.

MORTICE LOCK PREPARATION

For wood based fire doors of 60 minutes, integrity rating intumescent cards must be installed on both sides of the mortice case as per the door manufacturer's instructions.

WARRANTY

Our goods come with guarantees that cannot be excluded under the local consumer law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

PROGRAMMING

For programming of your lock, download the Schlage Breeze app and follow the instructions.



Recommended lock

Screwdriver (Phillips)

Omnia Smart Lock

INSTALLATION INSTRUCTIONS

Spindle, choose one set: Fixing screws, choose one set: ■ Legge 990 mortice lock Door thickness Straight through spindle 45 - 60mm doors 55 - 60mm doors ■ 35mm to 60mm Straight through spindle 35 - 45mm doors **Tools required** 50 - 55mm doors ■ Tape measure Split spindle 45 - 60mm doors Pencil Level 45 - 50mm doors Drill Split spindle 35 - 45mm doors MMM■ Drill bit - 10mm ■ Spade bit - 22mm 40 - 45mm doors ■ Hammer * Springs for use with split spindle only Chisel

35 - 40mm doors

Allegion (Australia) Pty Ltd
Freephone 1800 098 094
Email auinfo@allegion.com
www.allegion.com.au

Allegion (New Zealand) Limited
Freephone 0800 477 869
Email nzinfo@allegion.com
www.allegion.co.nz





* Spindle locking bar for use

Hexagonal screw casings

with straight through spindle only


Box contents

Scan here for more information on installing the Schlage Omnia Smart Lock

Hex key


1. PREPARING THE DOOR

After preparing the mortice lock as per the instructions of the lock, drill a spindle hole Ø22mm. From the centre of spindle hole, measure a top fixing hole at 160mm and a bottom fixing hole at 85mm, drill Ø10mm fixing holes. Install mortice lock.

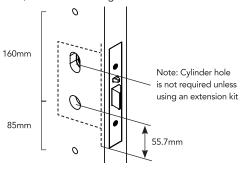


4. HANDING – INTERNAL UNIT (AS REQUIRED)

Use a screw driver to remove securing screws. Remove the lever, rotate the lever 180° and reattach the lever. Refasten the securing screws.

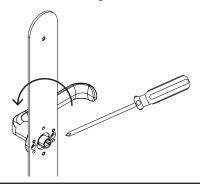

7. FASTEN EXTERNAL AND INTERNAL UNITS TO DOOR

Fasten units to the door, ensuring gasket is seated correctly.

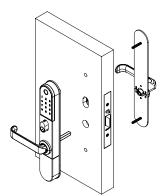


2. FASTEN HEXAGONAL POSTS

Attach the hexagonal screw casings to the studs on the back of the external unit.




5. ADJUST SPINDLE HOLDER DIRECTION

Ensure the spindle holder arrow points in the opposite direction of the lever when using a mortice lock. When using a latch, ensure the arrow points down.

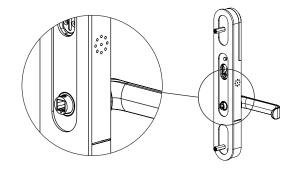


8. INSTALL BATTERIES

Use a screwdriver to remove the battery cover. Install 4x AAA alkaline batteries. Resecure the battery cover.

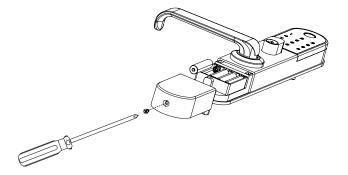


3. HANDING - EXTERNAL UNIT (AS REQUIRED)

Use the provided hex key to remove the grub screw from the lever. Remove the lever, rotate the lever 180° and reattach the lever. Refasten the grub screw.

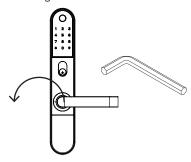

6. SELECT CORRECT LENGTH SCREWS AND SPINDLE

Refer to the front cover for box contents, to select the correct screws and spindles to suit your door thickness.

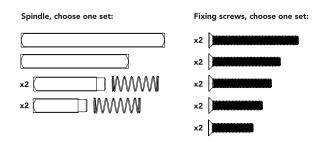

9. TEST OPERATION

Rotate the external lever, ensure latch bolt does not retract (refer to step 5). Rotate the internal lever, ensure latch bolt does retract (refer to step 6). Test operation using code 123456#. Ignore Bluetooth administrator voice message when testing code.

