

## Resetting Lock to Factory Default

**Please ignore this section in the user guide (on page 32) and use this card instead.**

When lock is reset to factory defaults all user codes (including the Master Code\*) are deleted and all programming features are reset to original default setting (see below).

1. Remove the battery cover and batteries.
2. Remove the interior escutcheon to access the reset pads.
3. The reset pads are located on bottom of the PCB board (See image).
4. While pressing the reset pads with tweezer, reinstall batteries and release reset pads with tweezer.
5. Replace battery cover.

Upon reset, the Master Code creation is the only option available and must be performed prior to any other programming of the lock.

