


1. Front Body (Front Body, installation on the outside of the door)

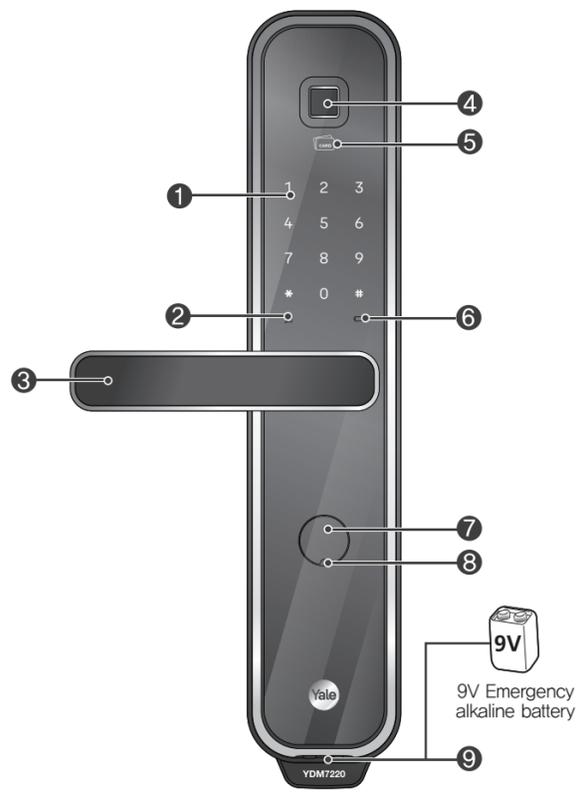


2. Basic Contents


Basic Contents




Front Body

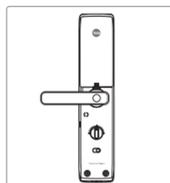

Main Body

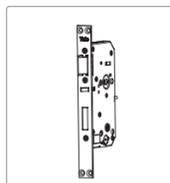

Lock Case

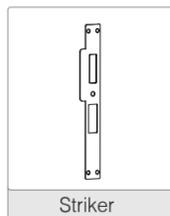

Striker

- User Manual
- Installation Guide
- AA Batteries X 4
- Card Keys X 4
- Mechanical Keys X 2
- Screws

Optional Accessories


- Remote Controller
- Remote Control Module
- Bluetooth Module

3. Specifications

Parts	Specifications	Remarks
Front Body	68(W) X 335(H) X 26.5(D) mm	Operating temperature -15~55°C (5~131°F)
Main Body	72(W) X 344(H) X 36(D) mm	
Battery	4EA 1.5V AA Alkaline batteries(Operating voltage: 4.5~6V)	
Optional product	Remote controller, Module and etc	

* Battery life may vary depending on temperature, moisture levels, frequency of use and the quality of the batteries.

4. Main Body (Main Body, installation on the inside of the door)

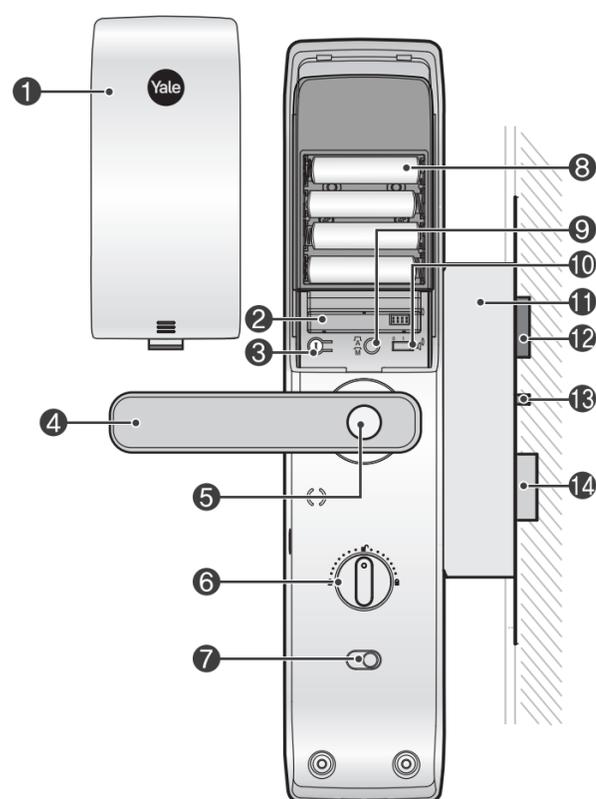

5. Front Body

1	Keypad(10-key)
2	Dead Bolt Jam Lamp
3	Lever
4	Fingerprint Sensor
5	Card Key Reader
6	Battery Change Lamp
7	Emergency key cover
8	Emergency Key (Inside)
9	Emergency Power Supply Terminal

6. Main Body

1	Battery Cover
2	Slot for Remote control module (Optional)
3	Registration button
4	Lever
5	Safe Handle Button
6	Manual Thumb Turn
7	Internal Forced Lock Switch
8	1.5V AA Alkaline Batteries (4PCS)
9	Auto/Manual Lock Button
10	Volume Control Switch
11	Lock Case
12	Latch Bolt
13	Automatic Locking Sensor
14	Dead Bolt

7. Setting Menu

Normal Mode: Without a designated person, anyone who knows 'User PIN Code' has authority to set features.

Master Code: Only a designated person who knows 'Master PIN Code' has authority to set features.

Visitor Code: The visitor code is different from user code and given out to visitors only.

Onetime Code: The onetime code is used only once for unlocking the door lock and automatically deleted after usage.

User Slot Number: It should be 2 digits(like '01', '02'...'99', '00') and available in advanced mode.

	Touch the Keypad of the Front Body with your palm to begin
	Press * button on the Keypad
	Press # button on the Keypad
	Press (Registration) button in every steps to start or complete the session
	Enter User Card Key (Up to 100EA)
	Enter User Fingerprint (Up to 100EA)
	Enter User Code (4 ~ 10 digits)
	Enter Master Code (4 ~ 10 digits)
	Enter Visitor Code (Only 4 digits)
	Enter Onetime Code (Only 4 digits)
	User Slot Number should be 2 digits (like '01' ... '99' and '00'. Location of 100th user slot must be assigned '00' instead of '100'.)
	Rotation area to add more features

8. Product Features

One-touch Fingerprint Verification
Easy Scan by Goodix fingerprint solution: Live finger detection and secure matching. The leading liveness performance improves the security of Yale smart lock dramatically.

Yale Access Bluetooth App (Yale Access BLE module: optional item)
This service is an innovative solution provided by YALE. Using high-tech IoT technology, user can access and unlock the digital door lock with your smartphone.

Smart Touchpad Automatic Locking
The automatic lock sensor detects the door closing and locks the door automatically within 5 seconds. The door locks when touch the keypad with the palm. As the automatic lock function does not work in manual lock mode, make sure to check that the door is securely locked when leaving the premises.

3 minute Lock Out Feature
After five (5) unsuccessful attempts of an invalid code or fingerprint, card key lock out mode is activated for 3 minutes.

Smart Etiquette
When entering a pin code on the keypad, the user can open the door lock in silent mode.

Fake PIN Code
Security enhancement to enter any number before or after entering a password to prevent the PIN code from being exposed.

Internal Forced Lock
It is a security-enhancing function that 'disables' authentication methods such as passwords, RFID cards and fingerprints from outside when setting up functions indoors.

External Forced Lock
It is a security-enhancing function that an alarm goes off if someone opens door from inside when setting up functions outside.

Voice Guide Feature
It guides user the operation status how to set each features, mode for easier and more convenient use.

Other features and Benefits

- Remote Controller (Optional): This option may not be available depending on your country or local dealer.
- Network Module/Controller (Optional): It allows door lock to connect with Home network controller.
- Intrusion/Broken Alarm.
- Low Battery Alarm and Emergency Power Supply.

9. Normal Mode (Default Mode)

Normal mode is a convenient mode for anyone to set the digital door lock. User can set password like user code, visitor code, onetime code and register user's fingerprints, card keys as well. Factory default is a normal mode.

1	2	3	4	5	6	7	8	9	10	11	12	
12 (Registration process) * Continue / Complete												
User Code Only 1EA												
Registr-ation												
Card Key Up to 100EA												
Registr-ation												
Fingerprint Up to 100EA												
Registr-ation												
Visitor Code Only 1EA												
Registr-ation												
Delete												
Onetime Code Only 1EA, Automatically deleted after use												
Registr-ation												
Delete												
Delete all credentials (Fingerprint, Card)												
Delete all finger-print												
Delete all card												

Language Change

Registr-ation								Korean				
								Chinese				
								English				
								Taiwanese				

Bluetooth setting (Yale Access app)

Registr-ation					Set up a new device in the app						
---------------	--	--	--	--	--------------------------------	--	--	--	--	--	--

Remote Controller

Registr-ation											
Delete											

Home Network Controller


Registr-ation											
Delete											

How to press set button of remote controller
Press the set(registration) button located on the front of remote controller. You can press it using a pin like the picture.


Please note the following when using Yale Access Bluetooth App.

- Depending on product type or FW version, app registration and door lock connection in normal mode may not be possible, so if registration is not possible, change from normal mode to master mode and try again. [App Registration in Master Mode: Master Pin Code-> (Registration Button)-> 7-> #]
- Because Yale Access Bluetooth App is only available in master mode, user code automatically changes to master code when registering APP in normal mode.
- Please be informed that all registered credentials will be deleted when changing mode or registering and deleting app.

10. Unlocking Door with Code

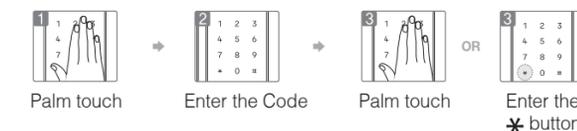

11. Unlocking Door with Fingerprint / Card Key

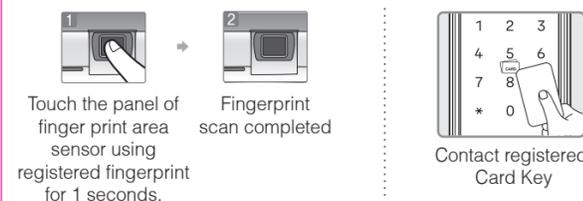


12. Safe Handle Feature



To disable Safe Handle Setting



 To enable Safe Handle Setting



  13. Opening Door(Inside/Outside)



14. Unlocking Door with Smart Etiquette



15. Locking the Door(Inside/Outside)

