



Install Template:

9008 - Flush pull & End pull Set



END PULL TEMPLATE

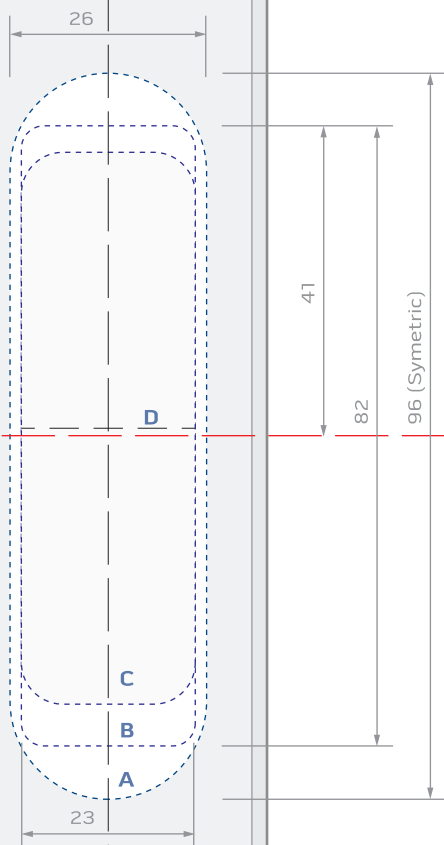

MIDLINE

D

C

B

A

Wood Door Cutting Details


- A**
- Cut 2mm deep
- B**
- Cut 15mm deep from front face
- Corner Radius 3mm

Do not cut rebate A if you intend your End Pull to sit proud.

Aluminium Door Routing Details

- C**
W=23 H=73
- Offset Vertical Centerline 1mm (see dashed line D)
- Corner Radius 5mm

FLUSH PULL TEMPLATE

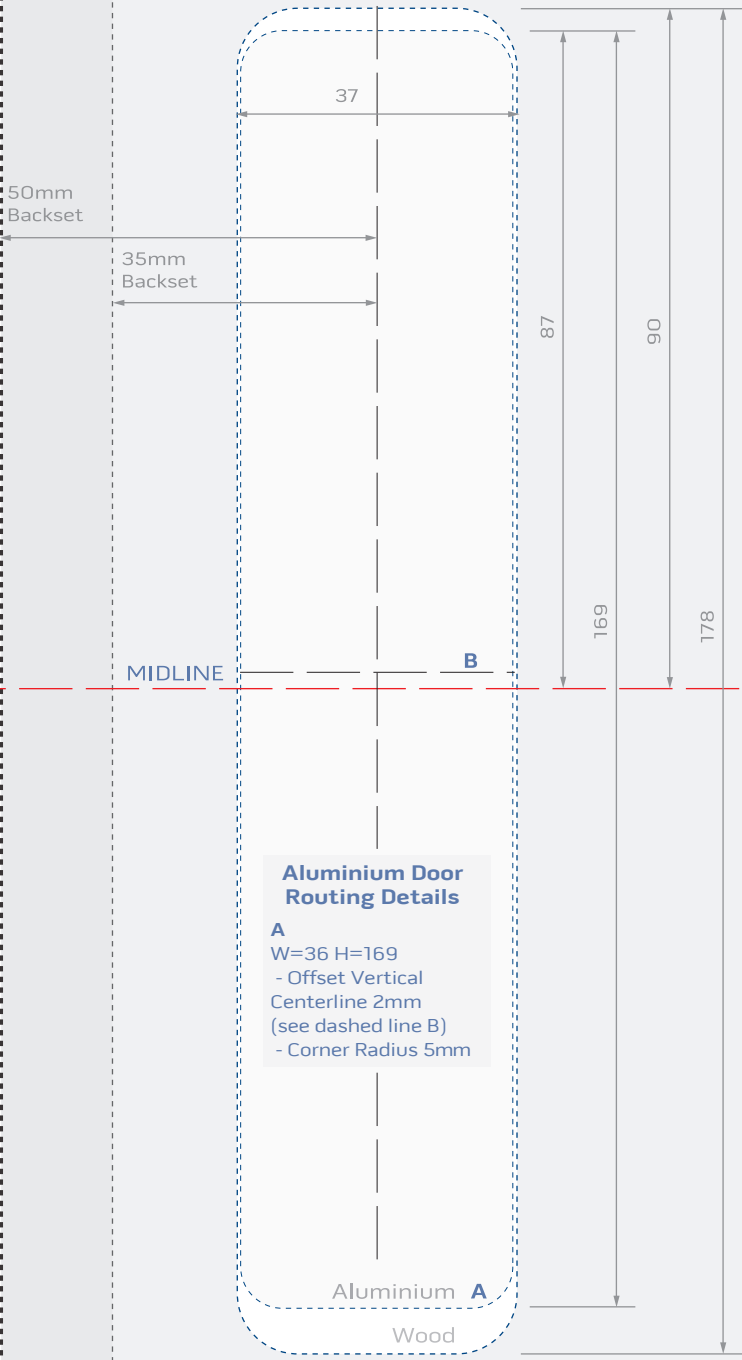

MIDLINE

B

Aluminium Door Routing Details

- A**
W=36 H=169
- Offset Vertical Centerline 2mm (see dashed line B)
- Corner Radius 5mm

Aluminium **A**

Wood

