
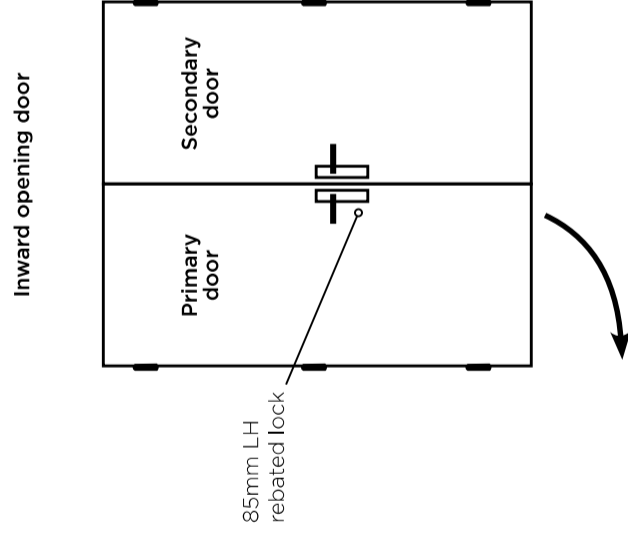



Technical information

LEFT & RIGHT HAND REBATED EURO LOCKS


Determined by which hand you use to open the primary door in a set of double/French doors.

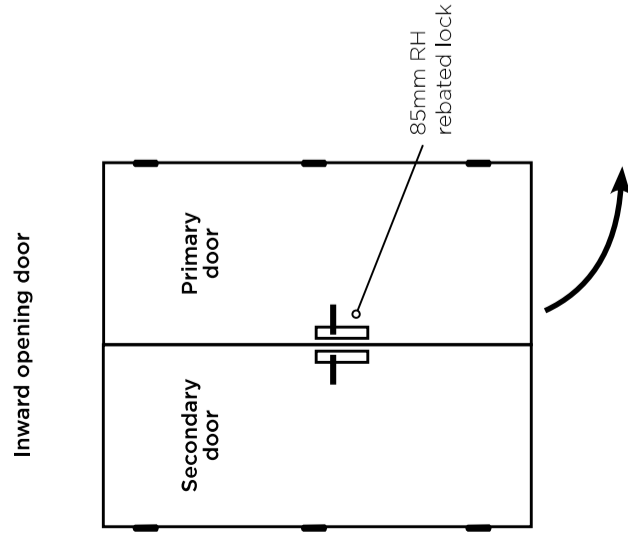

Outward opening door

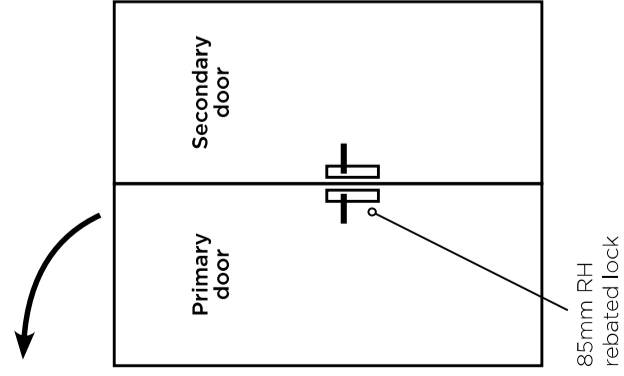

Outward opening door

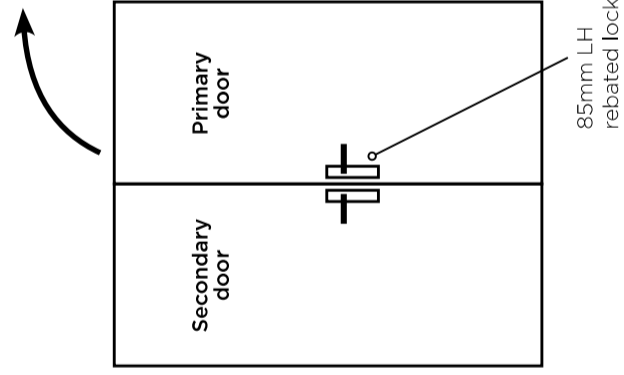

Choosing the right door furniture

FOLLOW THIS GUIDE TO FIND THE MOST SUITABLE LOCK FOR YOUR DOOR.

Remember – if your door doesn't need to lock, you simply need a tube latch (page 72) to make it function. If you are trying to replace an existing lock, simply remove it from your door, measure it and compare it with the sizes and types on our website to determine what you need.


EXTERNAL DOORS

Key type:

- If you're after a traditional 'old style' key, choose the skeleton key¹. This key is used with a 5 lever lock¹.
- If you'd prefer a modern looking key, choose the euro key². These keys can be easily replicated, changed or keyed by a locksmith, and require a euro cylinder³.

Door type:

- Regular single doors with a stile 110mm or greater require a 5 lever/euro mortice lock with standard 57mm backset.
- Regular single doors with a stile 90mm or less require a 5 lever/euro mortice lock with standard 46mm backset.
- If the measurements of the stile are between the above measurements you can use either lock, however, your lock will not be centered on the door stile.
- If your double or French doors are rebated, you will require a rebated lock⁴. The above measurements also apply to rebated locks⁴.

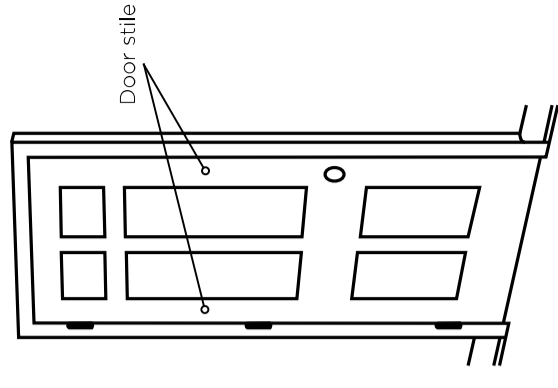

INTERNAL DOORS

Privacy:

- If your door needs a thumb turn privacy function (e.g. bathroom, bedroom, toilet, etc.), there are 2 options you can choose from:

1. Long backplate privacy door furniture: you will require a privacy mortice lock⁵ with a privacy adaptor⁶ (adaptor included with all privacy door furniture).
2. Door knob / lever on rose: these products require a separate privacy bolt⁷ and privacy turn⁸.

Lock type:

- If your internal door needs to lock with a key, you'll need a 3 lever mortice lock (skeleton key)⁹.
- If you have rebated double doors, a rebated 3 lever mortice lock¹⁰ is required.

