# Steadfast Holdback Door Stop Range

**Hinged Door Accessories** 



ASSA ABLOY, the global leader in door opening solutions.


#### **Installation Instructions**


**Application:** Designed to cushion the opening of hinged and folding doors and hold them open.

**Tools Required:** 

- Drill
- Pencil
- Tape Measure


Screwdriver

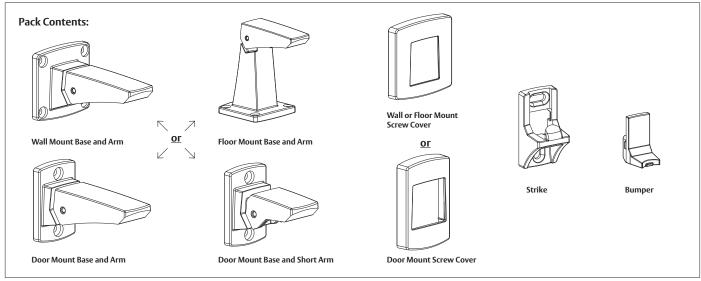

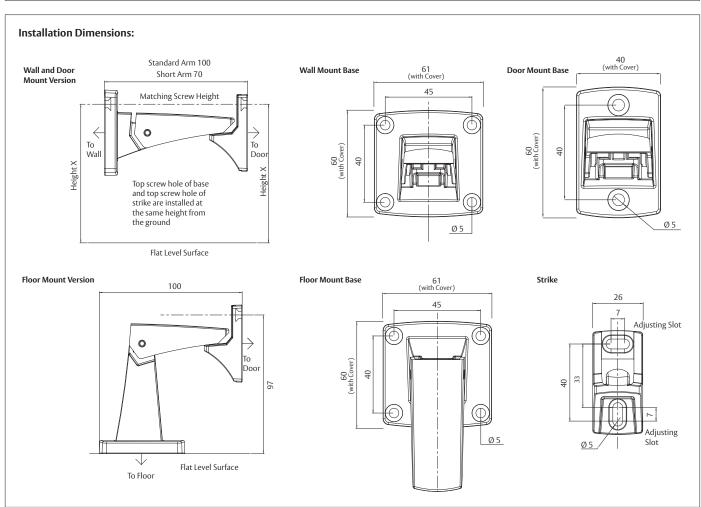

# 1. Fixing Base

- Check strike will fit on door before fixing
- Fix base to floor or wall

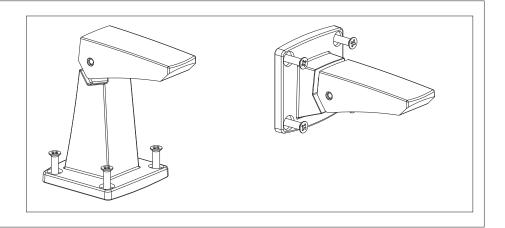


## 2. Fixing Strike


#### a) Position strike

- See Installation Tips for correct strike position
- Mark screw holes on door

### b) Fix strike

- Drill strike screw holes
- Fix strike in place

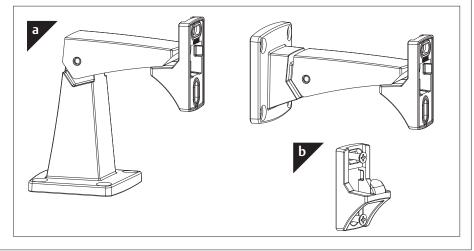

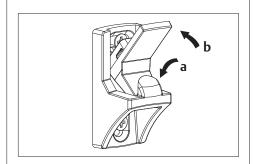


#### 3. Fitting Rubber Bumper

- Place rubber bumper into recess (a)
- Push bumper down and back (b)

# 4. Fitting Screw Cover

• Press screw cover over base

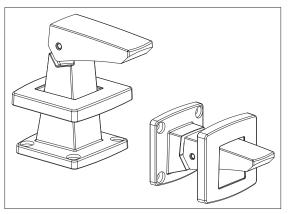

#### Installation Tips Level arm Arm on angle Arm at lowest point (at rest) Arm on angle • Keep arm level when installing the strike (at rest position) Adjust if necessary Wall Mount Version Wall Mount Version To adjust strike up/down - Remove top strike screw - Loosen bottom screw and adjust - Re-drill **top** screw hole and fix in place To adjust strike side to side - Remove **bottom** strike screw - Loosen top screw and adjust Strike installed in line with base Strike installed misaligned Angle of strike 15 degrees or less - Re-drill **bottom** screw hole and fix in place

