



### SOLID BRASS PULL HANDLES

Product codes: 8190 | 8191 | 8192

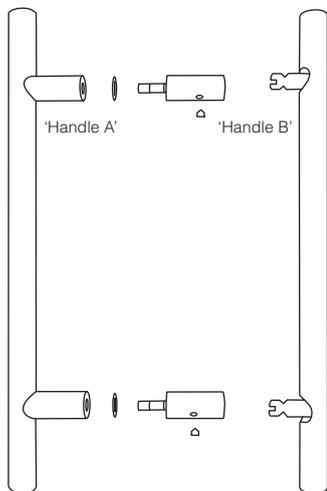

1. Take the pull handle apart by unscrewing the grub screws on both legs and then unscrewing the legs.

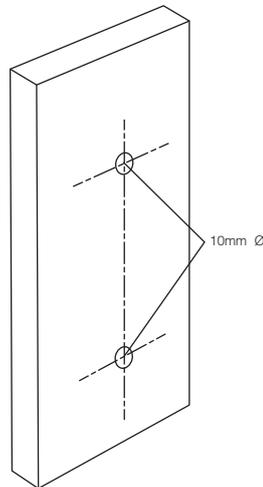


2. Mark the fixing position for the pull handle on the door. Ensure adequate space is provided for clearance of knuckles on the door jamb.

3. Drill two 10mm diameter holes at vertical positions for the leg centres.

8190 - 210mm crs


8191 - 300mm crs

8192 - 210mm crs

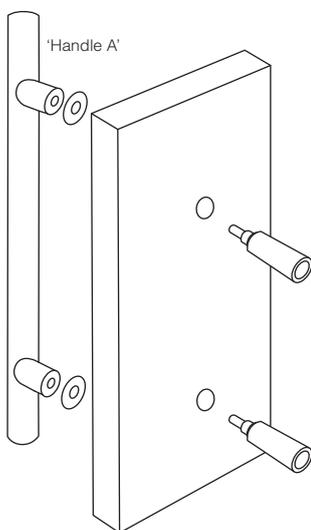

4. Insert the bolts through the legs and then through the door and tighten them onto 'Handle A'.

*Note: Use the long bolts provided for timber doors or the short bolts for glass doors. Only use the plastic sleeves and washers for glass doors.*

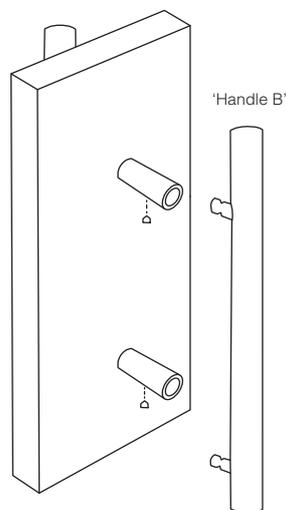

5. Insert 'handle B' into the pull handle legs and secure it with the grub screws.