


**BACK TO BACK  
FIXING**

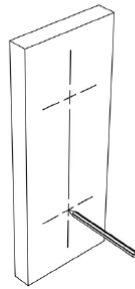


1

Mark fixing position on door and drill holes for through bolts. Ensure adequate space is provided for clearance of knuckles on door jamb.




3

Screw mounting to face of door with wood screws supplied.

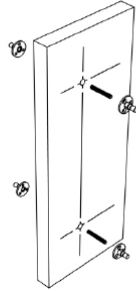

2


Attach through bolts to handle mounts. Place through door and attach mounts for other side. Tighten up mounts back to back.

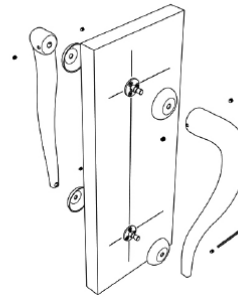

4


Fix handle base plates over mounts and attach handle using grub screws supplied.

**SINGLE HANDLE  
REAR FIX**

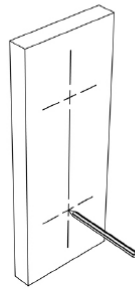


1

Mark fixing position on door and drill holes for through bolts. Ensure adequate space is provided for clearance of knuckles on door jamb.

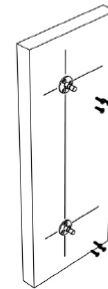


3

Screw mounting to face of door with wood screws supplied.

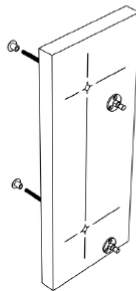

2


Fit threaded rod to handle mount and place through door. Attach decorative cap and tighten with Allen key supplied.

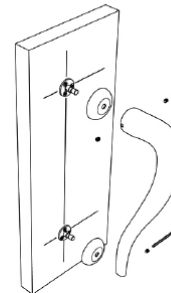

4


Fix handle base plates over mounts and attach handle using grub screws supplied.

**SINGLE HANDLE  
FACE FIX**

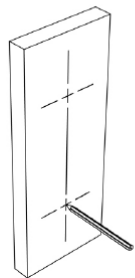


1

Mark fixing position on door. Ensure adequate space is provided for clearance of knuckles on door jamb.

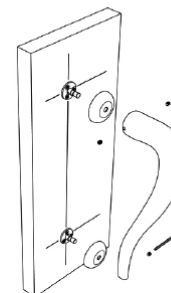

3

Fix handle base plates over mounts and attach handle using grub screws supplied.

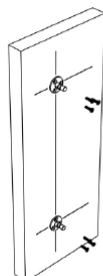

2

Screw mounting to face of door with screws supplied.

**NOTE:**

Face fixing is not recommended on Cedar or other soft timber doors.