


FUTURA DUMMY LEVER


Product codes: 9018D | 9022D
9058D | 9030D | 9036D | 9040D

To view an easy to follow how-to video for installing this product visit windsorhardware.co.nz/installation.

Note: It is important to ensure solid fixing is available for handle and screws (especially for hollow core doors).

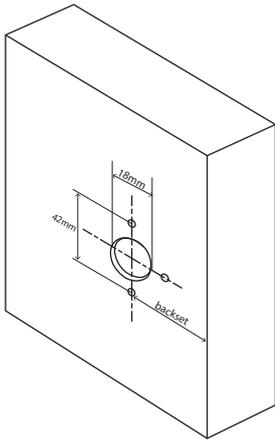


1. Establish the height and position for the handle on the door.
2. Drill a 18mm diameter recess on the face of the door to a depth of 5mm. Match the backset measurement of the passage doors throughout your home. Mark and drill three pilot holes, two vertically and one on the opposite side of the lever, at 42mm crs.

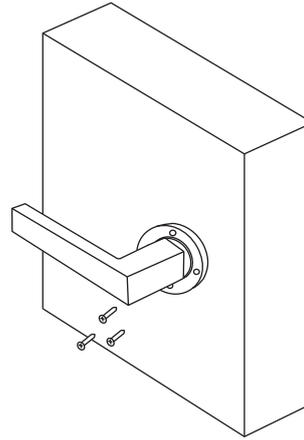

3. Install the handle by screwing the base plate to the door with the wood screws provided.

Note: In some cases where through door bolts are provided, the door can be drilled both sides to accept the through screws.

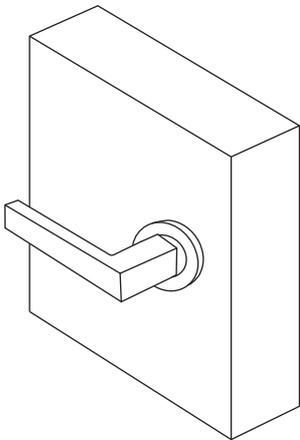

4. Screw the rose cover onto the handle and tighten the grub screw on the side of the lever onto the spindle. For the square rose (Futura Elite) press on the rose cover and tighten the grub screw on the side of the rose.

Note: The grub screws may need a re-tighten after a bedding-in period. We recommend medium strength thread-lock to be used, Windsor Code: 1276

