



Installation Instructions

! For child safety gates use the MagnaLatch® 'Top Pull' Safety Gate Latch.


Tools required:

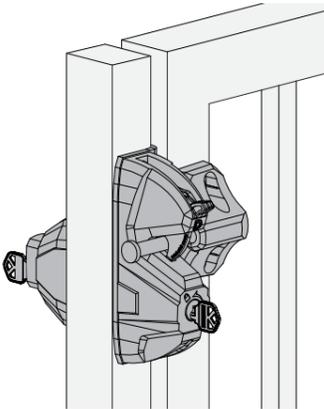

A COMPLETED INSTALLATION

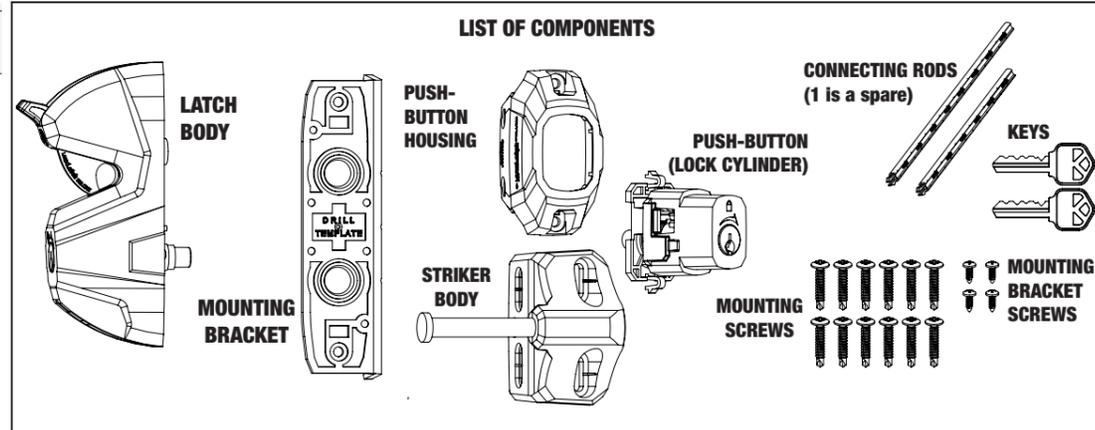


GAP VARIANCE:
1/2" - 1 1/2" (12-38mm)

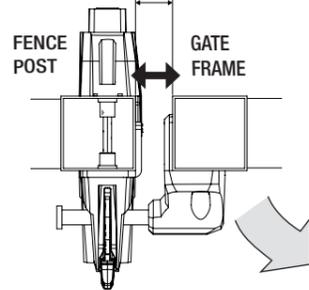

Left-hand-opening shown

1 DETERMINE LEFT- OR RIGHT-HANDED MOUNTING

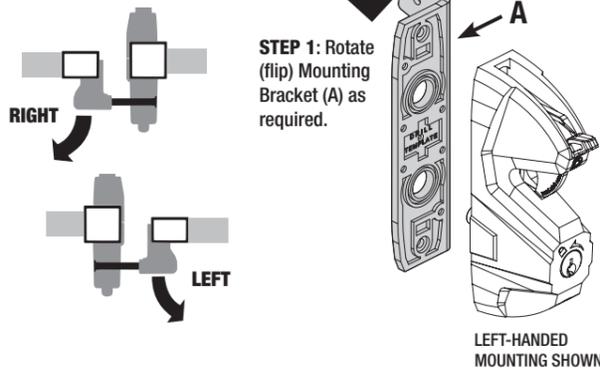

STEP 1: Rotate (flip) Mounting Bracket (A) as required.

! **IMPORTANT:**
Ensure padlock symbol is always at the top.

STEP 2: Rotate Push Button housing to match gate opening. Ensure the two sprung, polymer lugs (arrows above) clip neatly into housing.


2 POSITION OF LATCH ON GATE

STEP 1: Determine the height of latch on the fence post. Use the Mounting Bracket (A) as a fitting jig to mark the side of post (use a square to draw a level line) and the 13mm front-face drill hole circle. Be sure to align the side mark with the lower notch on the Bracket as shown.

STEP 2: Slide the Mounting Bracket down so that the center notch aligns with your marked line. Mark that point on the post face, which will be 3/4" (19mm) in from the outer edge.

STEP 3: Take the Mounting Bracket around to the opposite side of post and mark the opposing point to align with the center notch on the Bracket.


STEP 4: Drill holes through post, starting with pilot holes of 5/32" (4mm) on both sides of the post. (TIP: To ensure hole is level, **drill front and back sides separately**. Enlarge the holes by redrilling with the larger 1/2" (13mm) drill bit.

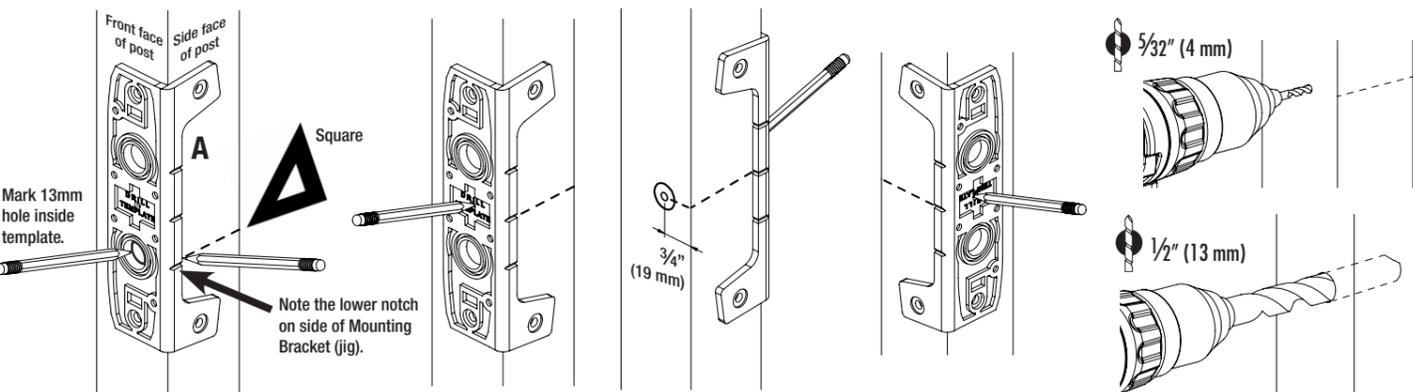


3 STEP 1: CONNECTING ROD - CUTTING TO SIZE & SEATING

! **IMPORTANT - for correct latch function**
- Mark connector rod 'B' to the exact depth of the fence post (outer wall).
- Cut rod 'B' straight and square on a flat surface.
- Remove rough or sharp edges to ensure correct fit.


TROUBLE SHOOTING:
If latch is not functioning properly when fully assembled recheck this step. Use spare rod to correct.

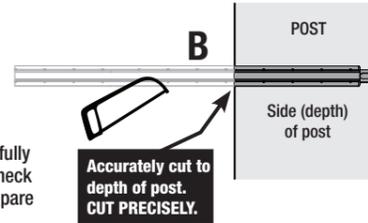

STEP 2: Insert the Rod into the External Access Push-Button (C) housing until it snaps into place.

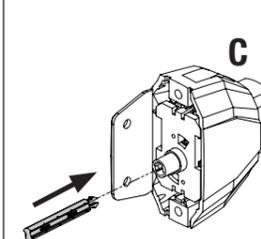


STEP 3: Use the four small screws to secure Mounting Bracket to the Latch Body.

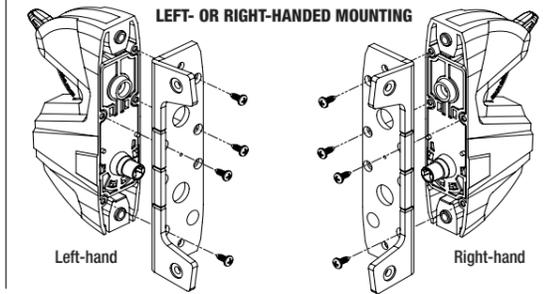

STEP 4: Insert the connected unit so that the rod slides fully through the post. Fix it in place using four screws. **Check that rod is flush with post face and is not protruding.**


STEP 5: Depress push-button (C) so that the sawn Rod protrudes out from the post.

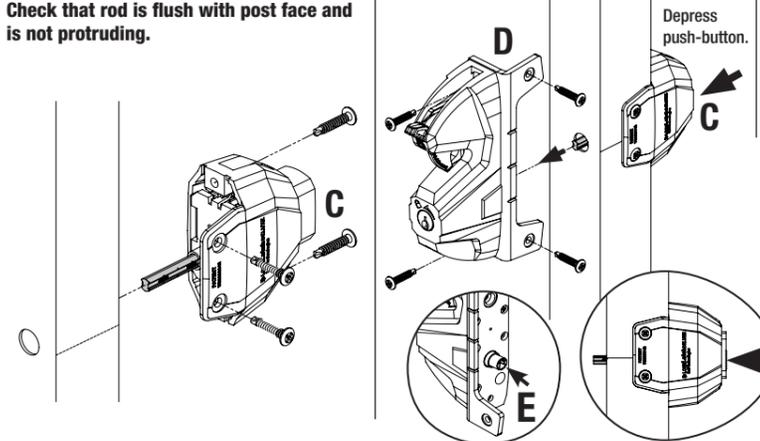


STEP 6: Position the Latch Body (D) so that the protruding rod slots into the corresponding interface (E) - see below - and then mount the Body with four screws.

Check key operation for Lock/Unlock in both the Latch Body and the Push-Button.

STEP 7: Take the Striker Body (F) and, centering the bolt in the middle of the tongue slot, fix it with four more screws, **being sure to mount the screws in the center of the slots.**

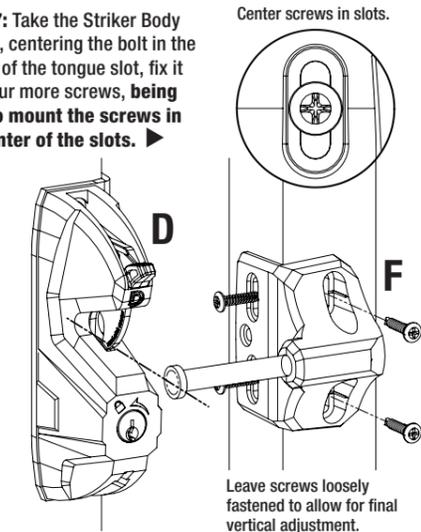

Leave screws loosely fastened to allow for final vertical adjustment.

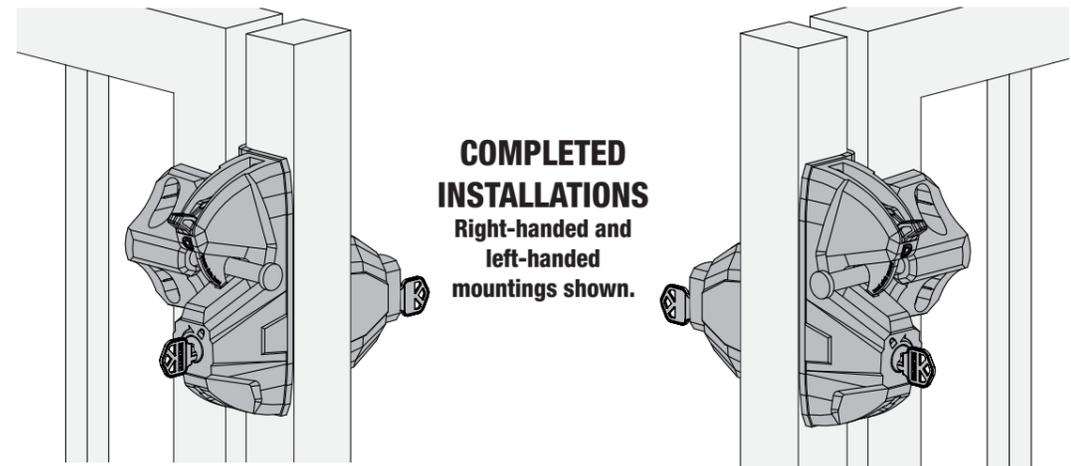

COMPLETED INSTALLATIONS
Right-handed and left-handed mountings shown.

LokkLatch and D are trademarks of D&D Group Pty Ltd, are registered in USA and elsewhere. The product is the subject of patent and design rights in USA and elsewhere. © Copyright D&D Technologies Pty Ltd 2021. Neither whole or part of this publication may be reproduced without prior permission.

IMPORTANT NOTES:

WARNING: Using LokkLatch® DELUXE on pool gates is permissible in North America (under certain conditions) but **NOT in Australia or NZ.**

NOTE: If installing the LokkLatch® DELUXE to a gate leading to a swimming pool or spa, consult your local building official for Code requirements in your area.

MAINTENANCE: REMOVE KEY/S FROM LOCK/S AFTER USE.

Do not lubricate the latch with petroleum-based lubricants at any time - use only powdered graphite. Ensure all screws are tightened firmly and that the Latch Body and/or Access Kit is kept free of dirt, sand and other debris which could impair reliable performance.



SCAN ME